



EzyHold.com.au

Retrofit Round Top Mount Deck

YOU WILL NEED




**This Protective Equipment
MUST BE WORN**

Tool List:

- Pencil
- Ruler or tape
- Hammer
- Jigsaw (fitted with a timber blade)
- Drill
- 4mm drill bit
- 10mm drill bit

Safety Equipment:

- Safety glasses
- Ear muffs

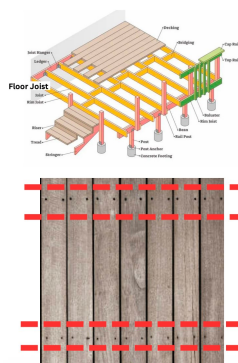

Floor Joist

What is a floor Joist?

Floor joists are horizontal beams that support the floor. They span the space between larger beams and help spread the weight

What is a floor Joist?

Floor joists are horizontal beams that support the floor. They span the space between larger beams and help spread the weight.

Please Note

This document is a guide only, based on how we install and recommend installing the Ezy Hold unit. The strength and performance of your installation depends on how it is installed. Ezy Hold Pty Ltd accepts no liability for installations that do not follow these guidelines, or for any damage or injury resulting from incorrect installation. If you are unsure about any step, we recommend engaging a licensed tradesperson.

Important — Pool & Wet Area Installations

If your Ezy Hold is being installed near a swimming pool or wet area, it is the responsibility of the installer to check and comply with all local laws and regulations regarding the installation of stainless steel products in that environment. Regulations vary by location — always check the requirements applicable to your area before installation.

INSTALLATION INSTRUCTIONS



This Protective Equipment
MUST BE WORN

Step 1:

Finding the perfect location for your Ezy Hold.

PRO TIP:

Your Ezy Hold needs to be half on two decking boards and up against a joist. Also make sure that once your Ezy Hold is installed and your umbrella is being used, it's not too close to any object so that the umbrella can open freely.

Step 2:

Locating the floor joists.

Using a ruler, slide it in between 2 decking boards hard up against your floor joist. Using a pencil, mark on the decking boards where the edge of the floor joist is. Mark across 2–3 decking boards to aid with the template alignment in Step 3.

Step 3:

Using the template provided, line up the joist edge line on the template with the marks you made on the decking boards in Step 2. The centre line on the template also needs to line up in the middle of the 2 decking boards.

Step 4:

Marking the holes.

Place a screw on each of the marked drill hole positions on the template and lightly tap with a hammer. This creates a small indent in the decking beneath, giving you an accurate centre point to drill from.

PRO TIP: *Always ensure the template is aligned with the edge of the floor joist and the centre line of the 2 decking boards before marking.*

Step 5:

Drill the holes.

Using a **10mm drill bit**, drill through the surface of the deck on each of the 4 indented centre points marked in Step 4.

Step 6:

Marking the cut out.

Using a ruler, connect the 4 holes with straight lines. Mark along the outside of the holes to define the rectangular cut out needed for the unit to sit inside.

INSTALLATION INSTRUCTIONS



This Protective Equipment
MUST BE WORN

Step 7:

Make the cut.

Using a jigsaw fitted with a timber blade, carefully cut along the marked lines.

PRO TIP: Measure twice, cut once. This ensures accuracy and prevents mistakes.

Step 8:

Check the fit and drill pilot hole.

Insert the Ezy Hold into the cut out and ensure it's pressed firmly up against the floor joist. Ensure the side of the unit with the eyelets is positioned hard up against the floor joist — this is critical for securing the unit correctly in Step 9. Using a **4mm drill bit**, drill 1 pilot hole through the top of the Ezy Hold into the top of the joist.

PRO TIP: Drill in the centre of the hole for a secure and accurate fit.

Step 9:

Securing the Ezy Hold.

Using the screws provided, drill **1 x 65mm screw** into the pilot hole from Step 8. You will then need access underneath your deck to drill the **2 x 50mm screws** through the eyelets on the side of the unit and into the side of the floor joist to secure it firmly.

PRO TIP: If you can't access underneath your deck, you'll need to pull up a few boards.

Step 10:

A noggin will need to be installed hard up against your Ezy Hold, opposite the floor joist. Depending on the layout of your decking subframe, you may need to install extra noggins perpendicular to your noggin.

INSTALLATION INSTRUCTIONS



This Protective Equipment
MUST BE WORN

Step 11:

Using a **4mm drill bit**, pre drill 2 pilot holes through the 2 remaining holes in the top of the Ezy Hold unit that sit over the noggin. Using the **2 x 65mm screws** provided, screw into the noggin to secure the unit firmly.

Step 12:

Attaching the mounting pole.

Lift the lid of the Ezy Hold and insert the mounting pole. Hand tighten the shorter star grip to the lid of the Ezy Hold to securely hold the mounting pole in place.

Place the rubber grommet provided around your umbrella pole, then insert your umbrella or an alternative accessory into the mounting pole.

Place the aluminium gussets provided either side of your accessory into the mounting pole. Ensure that the gussets are in line with the star grips and secure firmly. The gussets and rubber have been provided to allow you to centre your accessory inside the mounting pole.

Finally, drill an **8.5mm hole** through the mounting pole and your accessory to maximise strength with the bolt provided.

When you're ready to pack down your umbrella, simply undo the bottom star grip and take out your umbrella, leaving the mounting pole attached to your umbrella. Close the lid and place the decking insert on top of the unit for a seamless and flush finish.

For any further questions or enquiries, please reach out and call us on
0418 555 517 or email us at **info@ezyhold.com.au**

Ezyhold.com.au